 
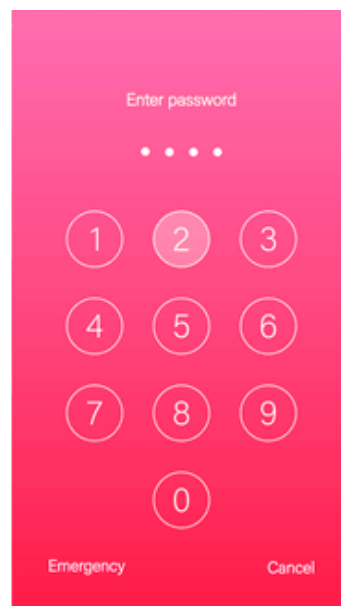 


iLOQ S50 Quick Guide - Opening a lock with an Android phone

1 Open the screen lock


Note: Always keep your phone locked (unlock it using biometric ID, facial recognition, a PIN code or a pattern).

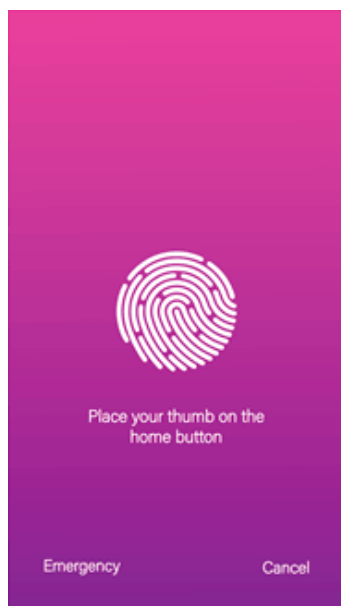

2

Put your phone on top of the black knob of the lock and wait until the iLOQ S50 application opens, and the screen turns to grey.

Note: the location of the *NFC antenna* varies between different Android phones. It is typically on the back, but it can be on the top, in the middle or at the bottom of the phone:

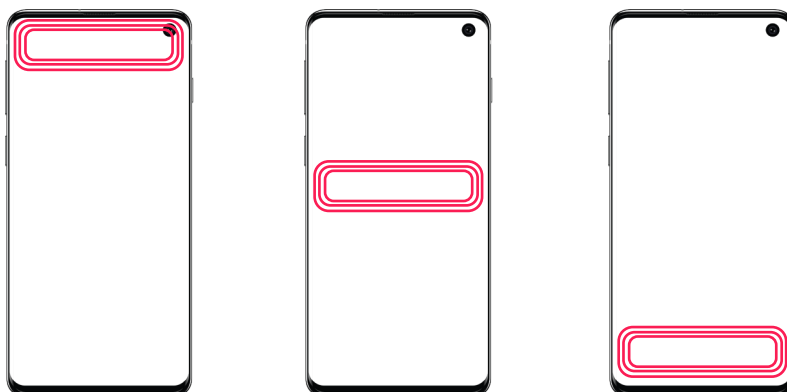
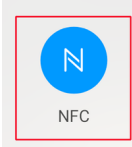





3

When you see a green view with a check mark, remove your phone from the lock and open the lock by turning the black knob about 1/4 a turn clockwise.

Note: Sometimes the opening process may take a bit longer if some information needs to be updated at the same time.



<p>4</p>	<p>What if the lock doesn't open?</p>	
<p>A)</p>	<p>Please, contact your key admin person to check that you have the needed access rights to open the lock in question.</p>	
<p>B)</p>	<p>Check that your NFC antenna is set on</p>	
<p>C)</p>	<p>Please, don't use a 'Pop socket' which could cover the NFC antenna if it is in the middle and on the back of your phone.</p>	
<p>D)</p>	<p>The communication distance between the lock and phone is 0 – 20 mm, so you can even touch the lock with your phone.</p>	
<p>E)</p>	<p>Check the correct location of the NFC antenna in your phone. Refer to your phone's operating instructions or contact the manufacturer.</p>	

More information: support.iloq.com